

CONTROL SYSTEMS

PRODUCT

NOTICE

ANILAM®

June 4, 2009


USB Recovery Drive for Anilam 6000i CNC product

Note: USB Recovery drives to be used only with Acu-Rite Companies CNC products.

Anilam 6000i bootable 8 GB USB Recovery Drives will now be included with all new CNC systems. USB Recovery Drive & USB Recovery Drive User's Guide is supplied with each order. USB Drive contains a factory disk images of the current 6000i Hard Drive and can be used to restore the Hard Drive in the event of corruption or lost data. USB Disk images can be updated and overwritten when system changes are made by builders, dealers or installers. USB Disk imaging software is preloaded on the factory USB Drive.

Basic instructions: Plug the USB Recovery Drive to available CNC USB port and power system on, Recovery menu options screen will appear shortly after power on. External USB key board is required to navigate the USB recovery menu choices. Default Auto backup of CNC files will execute after 60 seconds if no recovery choice is made before time out.

Pictured below: **PN 684138-01** USB Recovery Drive Assembly

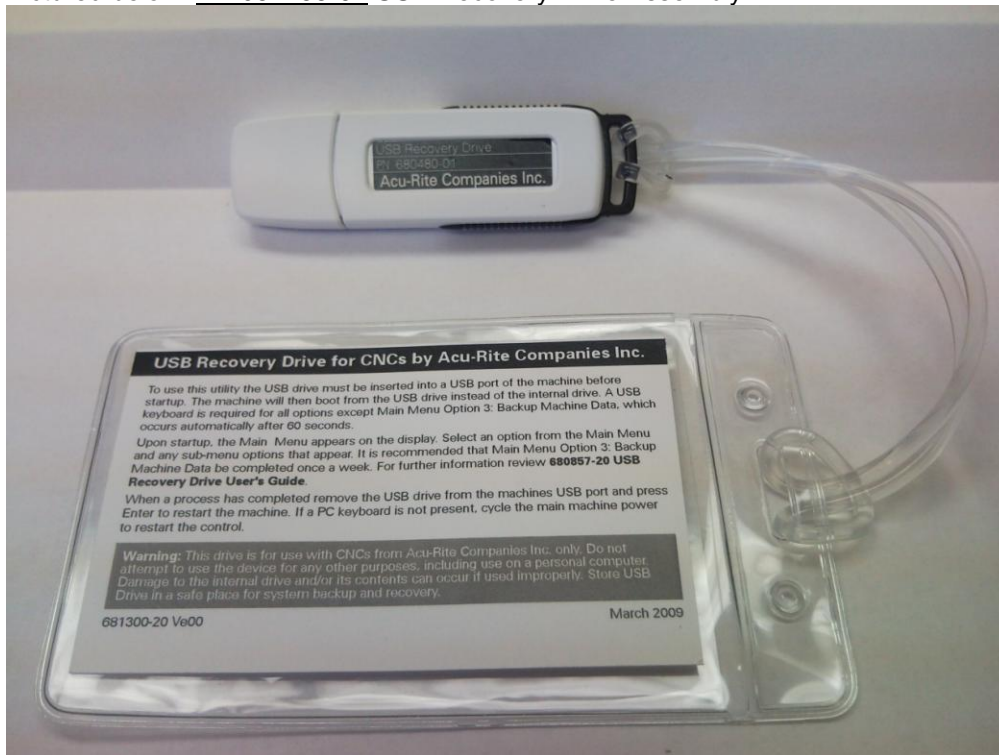

ACU-RITE COMPANIES INC.

One Precision Way • Jamestown, NY 14701 • 1•800•344•2311 • Fax: 716•661•1888 • www.anilam.com